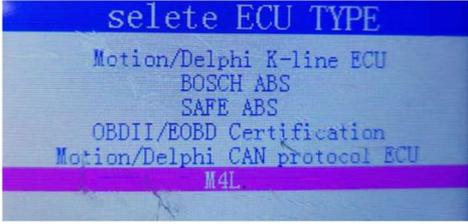
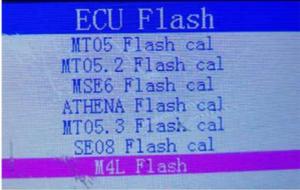


## Continental System Change Speed

1. Connect the 16 pin diagnostic interface of the scooter
2. Turn on the key


3. Select: M4L, Click  Pic: 

4. Select: ECU Flash, Click  Pic: 


5. Select: M4L Flash, Click  Pic: 

6. Select the Map, Click  :


M4L\_25km210118.pac  
M4L\_25km210118.pac  
M4L\_25km210118.pac  
M4L\_25km210118.pac, Pic:

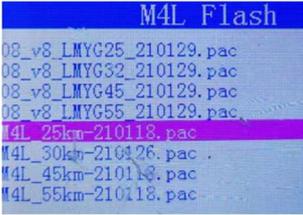


7. Confirm the Map, Click  :

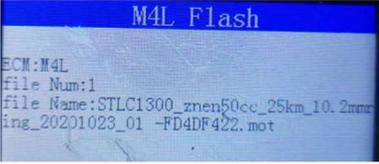

8. In the process of writing:

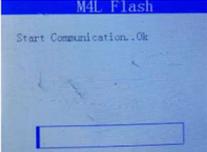


9. Finish writing:

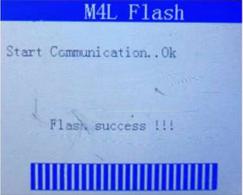

10. After finished, Click  Quit

11. Turn off key, Wait 15 seconds; turn on key, start engine