Motion System Change Speed

- 1. Connect the 16 pin diagnostic interface of the scooter
- 2. Turn on the key



4. Select: ECU Flash, Click Pic:




MT05 Flash cal
MT05. 2 Flash cal
MSE6 Flash cal
ATHENA Flash cal
ATHENA Flash cal
MT05. 3 Flash cal
MT05. 3 Flash cal
MT05. 3 Flash cal
MT05. 4 Flash cal
MT05. 5 Flash cal
MT05. 6 Flash cal
MT05. 6 Flash cal
MT05. 8 Flash cal
MT

6. Select the Map, Click :

08_V8_lmyg25_0128.pac 08_V8_lmyg32_0128.pac 08_V8_lmyg45_0128.pac 08_V8_lmyg55_0128.pac, Pic:



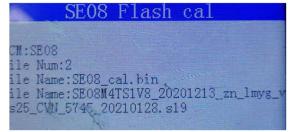

7. Confirm the Map, Click





8. In the process of writing:



9. Finish writing:



11. Turn off key, Wait 15 seconds; turn on key, start engine